

EAGLOTEST

S690P

**ROGOWSKI COIL
POWER**



USER MANUAL

CATALOG

Safety Warnings	1
Introduction	2
Specifications	3
Structure	5
Operation	6
5.1 Turn On/Off	6
5.2 Modes	6
5.3 Data Save & Data Hold	6
5.4 View Data	6
5.5 Peak Value	6
5.6 Delete Saved Data	7
5.7 Data Upload	7
5.8 Testing	7
Battery Management	11
Packing List	12

SECTION 1

Safety Warnings

- In any circumstances please be cautious while using the instrument.
- Please be aware of all warnings and symbols on the instrument.
- Ensure that the test leads are securely connected to the instrument terminal.
- DO NOT leave the instrument under direct sunlight or in environments with high
- temperatures or humidity.
- While replacing the batteries please be aware of the polarity. If the instrument is
- not going to be in use, please remove the batteries.
- DO NOT use the instrument if the battery cover is not securely fixed to the
- instrument.
- DO NOT use the instrument if any part of the housing or wire is cracked, or if any
- internal components are exposed.
- The use, disassembly, and maintenance of this instrument must be operated by the
- authorized and trained personnel only.
- Keep the instrument clean and maintain the instrument regularly. Do not use
- corrosive or abrasive materials to clean it. Only use soft cloths (such as cloth for
- glasses), dipped in lubricant/degreaser like WD-40, and gently wipe the instrument.
- If the continued usage of this instrument poses danger to the operator, then the
- instrument should be sealed immediately and hand it over to authorized
- organizations to dispose of it.
- DO NOT USE THIS INSTRUMENT FOR CIRCUITS EXCEEDING 1000V
- Please be aware of all the warning symbols  on the manual, operators must
- use the instrument safely.
- Please be aware of all the danger symbols  on the manual, operators must
- strictly follow the instructions of the warning information.

SECTION 2

Introduction

Thank you for purchasing our Flexible Clamp Meter Series. For a better experience of using our product, please thoroughly read our instruction manual, so that the operator is completely familiar with the instrument, and also please follow all safety instructions.

The coil of our Flexible Clamp Meter is designed to be open and closed like a lid of a pen. Simply pull out of/push into the notch to disconnect/connect it, which is very easy to operate. It is widely used in many industries, and is especially suitable for testing applications such as wire systems of high density, transformer core grounding current, current of thick cables; power of motors and transformers; relays, thyristor-controlled rectifier, semiconductor switches, power electronic conversion equipment, and arc welding in industrial environments where current is severely distorted.

The flexible clamp adopts the advanced Rockwell Coil (or Rogowski Coil) technology, which is a toroidal coil that is uniformly wound on a non-ferromagnetic material. This technology not only significantly reduces the hysteresis losses, but also introduces almost zero phase error. As magnetic saturation can be avoided, extremely high linearity and good interference-immunity are achieved. The output signal is the derivative of current over time. By integrating the output voltage signal, the input current can be calculated. The current measurement range can be from milliamps to tens of thousands of amperes. This instrument also includes functions such as Peak Value, Data Hold, Data Save, and USB data transfer. It is a convenient, versatile, and safe instrument for electrical testings.

SECTION 3

Specifications

Function	AC Current
Testing Method	Flexible CT, Integration
Power	3V DC (AAA 1.5V X 2)
Display	4-bit LCD display, backlight function, suitable for dark ambient
Measurement Range	Current: 0.00A ~ 9999A
	AC Voltage: 0.00V~1000V
	Frequency: 50~60Hz
	Phase Angle: 0°~360°
	Power: 0.0mW~9999kW
Accuracy (26°C ± 3°C, Below 70%RH)	Current: ±2%±3dgt
	AC Voltage: ±1.5%±3dgt
	Frequency: ±0.5Hz
	Phase Angle: ±4°
	Power: ±2%±3dgt
Resolution	10mA, 0.01V, 0.1Hz, 1°, 0.1mW
Clamp Size	Inner Diameter Φ200mm
Coil Spec	Thickness Φ7.5mm, length 650mm
Data Storage	99 Sets, blinking of the “FULL” symbol indicates that memory is full.
Position of Conductor	Middle of the clamp/coil
USB Port	Data upload to a PC for better analysis
Frequency	50Hz and 60Hz, Auto detection
Range	Auto
Sampling Rate	2 Samples/second

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China

S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology

SECTION 3

Line Voltage	Below AC 1000V
Dimensions	Instrument: 350mm×220mm×38mm (Coil expanded)
	Package: 285mm×175mm×63mm
Data Hold	Data hold function is indicated by the “DH” symbol.
View Data	Press and hold the MEM button to view data.
Overload	Overload is indicated by the “OL” symbol
Peak Hold	Capture and hold the highest magnitude of the measured parameter.
Auto Shutdown	The instrument will be shut down after 15 minutes of idle.
Low Battery	Please replace the batteries when the battery voltage is low.
Weight	300g (with batteries), 750g (package)
Operating Current	30mA
Ideal Working Conditions	-10℃ ~ 40℃, below 80%RH
Ideal Storage Conditions	-10℃ ~ 60℃, below 70%RH
Safety Standards	IEC1010-1, IEC1010-2-032, Pollution Category II, CAT IV(600V), CAT III (1000V)

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China

S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology

SECTION 4

Structure



- | | |
|-------------------------|--------------------------------------|
| 1. Flexible Coil | 9. Lanyard |
| 2. Current Direction | 10. USB Terminal |
| 3. Product Model Label | 11. Voltage V Terminal (only S690P) |
| 4. LCD | 12. Double-color Molded Handle |
| 5. Power Button | 13. Coil socket (Pull to disconnect) |
| 6. Up Button | |
| 7. Down Button | |
| 8. Voltage COM Terminal | |

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China

S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology

SECTION 5

Operation

5.1 Turn On/Off

Press the  button to turn on and off the instrument. The instrument will turn off automatically after 15 minutes of idle.

5.2 Modes

Once the Instrument has been turned on, press the  button to toggle between different modes (Current, Voltage, Frequency, Phase Angle, Power).

5.3 Data Save & Data Hold

During testing press the  to hold the data, press the  button again to cancel. HOLD data is automatically saved and numbered. The instrument can save up to 99 sets of data. If the memory is full, a "FULL" symbol will be indicated.

5.4 View Data

Press and hold the  button to view the saved data. Then press the  or  button to navigate the data sets. Press the  button to return to testing modes.

5.5 Peak Value

Press and hold the  button to enable the Peak Function. The instrument will

SECTION 5

continuously measure the current, and keep the highest recorded magnitude when test is over. Press and hold the  button again to cancel the function.

5.6 Delete Saved Data

While viewing saved data, press and hold the  button to delete ALL data, and a “DEL” symbol will be displayed. Once the data is deleted it cannot be recovered.

5.7 Data Upload

Use a USB cable to connect the instrument and a computer. Once the connection is done, turn on the instrument and run the software on the computer. Users will be able to export data in txt or excel format.

5.8 Testing

	Caution! Voltage is present! The use, disassembly, and maintenance of this instrument must be operated by the authorized and trained personnel only. Please strictly follow all the safety instructions, or it may lead to electrical shock and even pose a threat to life.
	DO NOT use the instrument for circuits above 1000 V. It can damage the instrument and injure the operator.
	Please ensure that the flexible clamp is closed before testing.
	Please periodically clean the instrument to maintain its proper function.
	To test the leakage current, clamp around the live and the neutral wire (clamp 2 wires) with the flexible clamp.

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China


S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology

SECTION 5

To test the Earth Current, clamp around the earthing (grounding) wire (only 1 wire).


To test the leakage current in a 3-phase 4-wire system, clamp

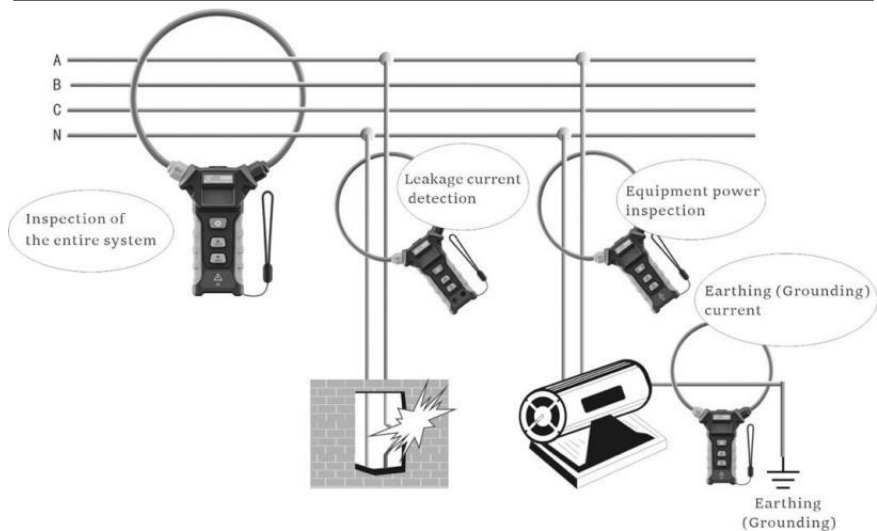

Below Setup only Applies to S690P



Single-Phase Current Measurement

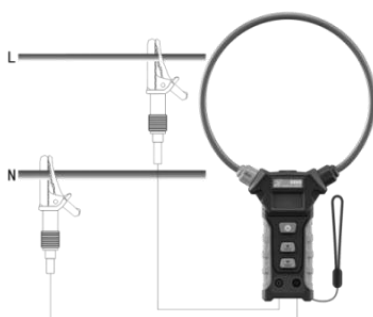

Single Phase Voltage Measurement

SALES OFFICE

Email: sales@eaglotest.com


Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China


S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology


SECTION 5

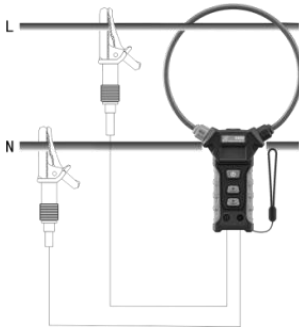


Single-Phase Current, Voltage, and Power Measurement

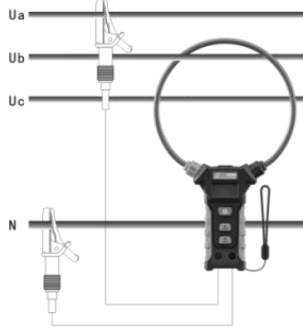

3-Phase 4-Wire System, Ua Voltage and Ib Current Measurement

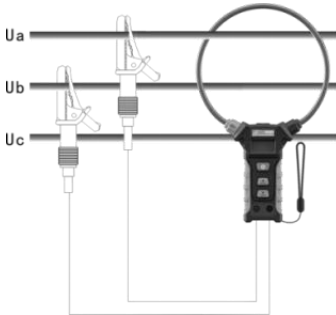

3-Phase 3-Wire System, Uab Voltage, Ia Current, and Power Measurement

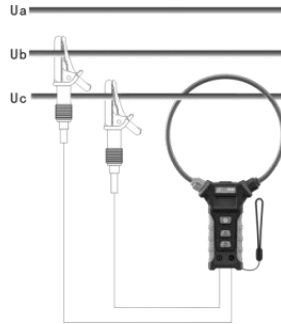

3-Phase 3-Wire System, Ucb Voltage, Ic Current, and Power Measurement

3-Phase 4-Wire System (balanced load)

Phase Sequence	Phase Angle	Phase Sequence	Phase Angle
Ua-Ub	120°	Ia-Ib	120°
Ub-Uc	120°	Ib-Ic	120°
Uc-Ua	120°	Ic-Ia	120°
Ua-Uc	240°	Ia-Ic	240°

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China

S690P
Rogowski Coil Power Meter


www.eaglotest.com
Eaglotest Technology

SECTION 5


3-Phase 3-Wire System (balanced load)

Phase Sequence	Phase Angle	Phase Sequence	Phase Angle
Uab-Ucb	300°	Ia-Ic	240°
Uab-Ia	30°	Ucb-Ic	330°

3-Phase 4-Wire and 3-Phase 3-Wire Vector Diagrams

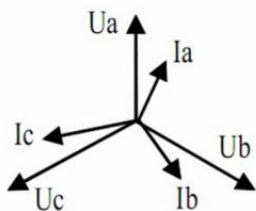

3-Phase 4-Wire Vector Graph

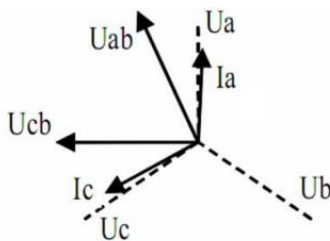

3-Phase 3-Wire Vector Graph

SALES OFFICE

Email: sales@eaglotest.com

Tel: +86 020 31529626

Add: Building 4, No.18 Keyuan Road,
Baiyun District, Guangzhou, Guangdong, China

S690P
Rogowski Coil Power Meter

www.eaglotest.com
Eaglotest Technology

Battery Management

	Warning! DO NOT perform any testing when the battery cover is not securely fixed to the instrument
	Please be aware of the polarity of the batteries, it could damage the instrument if placed wrong.
	Please replace the battery promptly when the batteries are low in voltage.
	Please remove the batteries if the instrument will not be used within 1 month.

- Press the  button to turn off the instrument, then loosen the screws at the back of the instrument to remove the batteries. Please make sure that the instrument is turned off before removing the batteries.
- Once new batteries have been placed in, press the  button to turn it on. If the instrument does not turn on, please repeat step 1.

Packing List

Instrument	1
Instrument Bag	1
Voltage Test Leads	2
USB Cable	1
Batteries (AAA 1.5V)	2
Manual and Certificate of Conformity	1 of Each

Note:

- We are responsible for other damages caused by the use of this product.
- The contents of this user manual do not justify the use of the product for special purpose.
- The company reserves the right to modify the contents of the user manual. In the case of modification, no further notice will be given.

